

NSG 4070B APPLICATION FOR ISO 11452-4:2011

Test parameter

Standard:	ISO 11452-4:2011	Signal generation:
Frequency range:	1 MHz to 400 MHz	Modulator:
Level 1 in mA:	20 to 60 to 30	Power meter:
Level 2 in mA:	33 to 100 to 50	Power amplifier:
Level 3 in mA:	50 to 150 to 75	Directional coupler:
Level 4 in mA:	66 to 200 to 100	Current injection probe:
Modulation:	e.g. CW, 1 kHz AM 80%	Monitoring probe:
	(Peak conservation)	Calibration jig:
Test method:	Substitution method with	Termination:
	optional monitoring probe,	Attenuation:
	Closed loop method with power limitation	Software:
Monitoring probe:	only for information (substitu- tions method)	

 NSG 4070B-0

 included in NSG 4070B-0

 3x included in NSG 4070B-0

 CBA 400M-110

 CDP 0100A

 robe:
 CIP 9136A

 MD 4070

 PCJ 9201B

 50 Ω 10 W

 20 dB 10 W

 incl. in NSG 4070 or optional


 C5I or WIN 6000



WARNING: The power meter inputs are very sensitive. It is the user's responsibility to ensure that the selected test levels does not damage the equipment. Any hardware/setup changes should be calculated before starting the test.

Equipment


Calibration set-up for monitoring probe

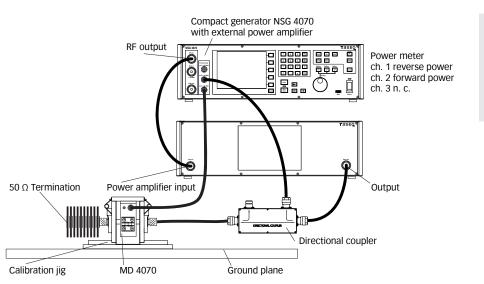

Remarks:


The monitoring probe MD 4070 needs to be calibrated in the way of its use (active, passive or with switching at a specific frequency from active to passive).



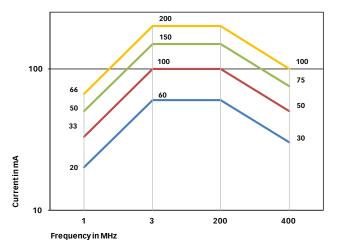

Test level — for ISO 11452-4:2011 Level 1 Test level — for ISO 11452-4:2011 Level 2 Test level — for ISO 11452-4:2011 Level 3 Test level — for ISO 11452-4:2011 Level 4

Calibration set-up for all levels

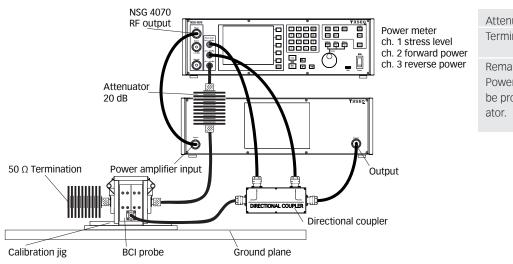


Attenuator: 20 dB, 10 W Termination: 50 Ω 10 W

Remarks:

Power meter channel 1 needs to be protected with a 20 dB attenu-

Test set-up with monitoring probe

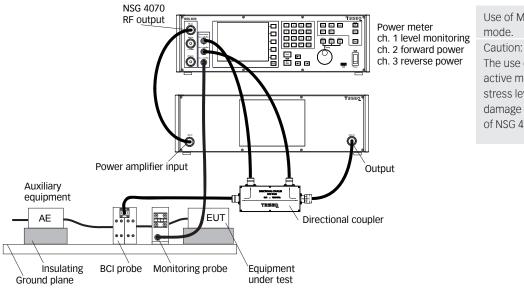

Use of MD 4070 in the passive mode.

The use of the MD 4070 in the active mode during tests with stress levels above 20 mA could damage power meter channel 1 of NSG 4070.



Teseg GmbH Landsberger Str. 255 12623 Berlin Germany T + 49 30 56 59 88 35 F + 49 30 56 59 88 34 desales@teseq.com www.teseq.com